




Drive Analyzer®

DA Drive Analyzer License Purchase and App Installation Guide for MAC PCs


The purpose of this document is to guide users through the DA Drive Analyzer license purchase and app installation process. The user needs to go through the license purchase process before installing the DA Drive Analyzer app. You can accomplish this by following the steps below.

1. License Purchase


- a. To purchase a DA Drive Analyzer License, please visit DA Drive Analyzer's shop page at <https://ulink-da.com/shop-pc/>

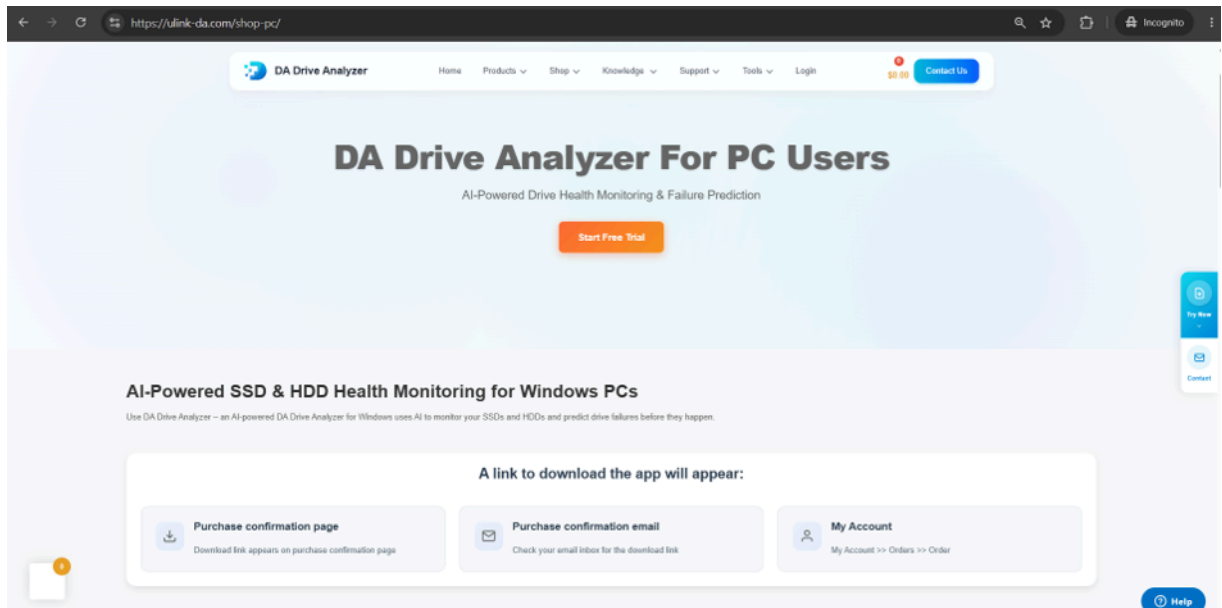


- b. We currently have 3 licenses for DA Drive Analyzer under the “PC Licenses” section. Please check out the features specific to each license under the “Choose Your License ” section and then click on the license you wish to obtain.

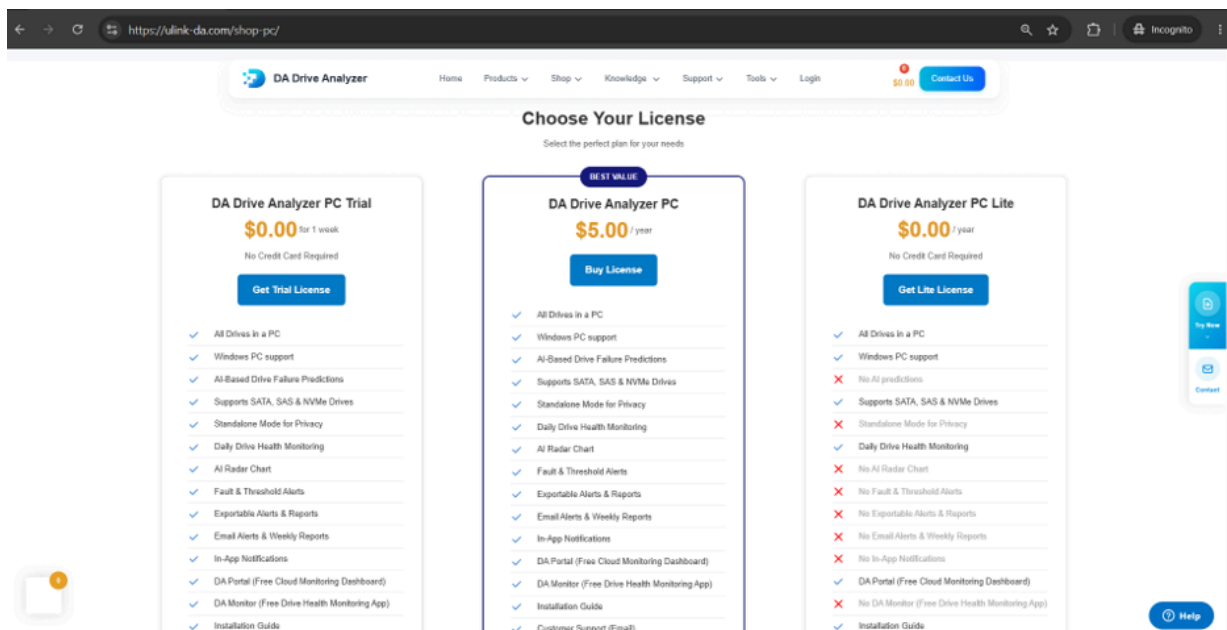


- c. After clicking on a specific license, you will be guided to a product page where you can choose the number of licenses you wish to proceed with. After selecting the number of licenses you would like, click on the “Add to Cart” button.

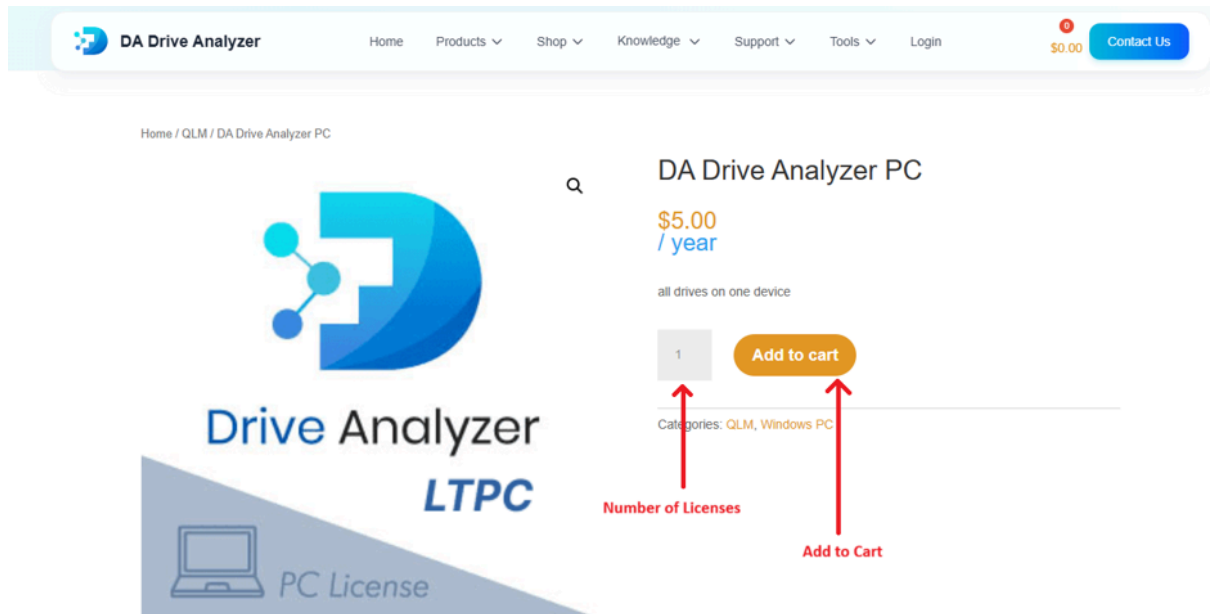


- d. After adding the licenses to the cart, proceed to check out the cart by clicking on the “View Cart” button or “Cart” icon in the top right corner. This will lead you to the cart page, where you can click on the “proceed to checkout” button to purchase the license.

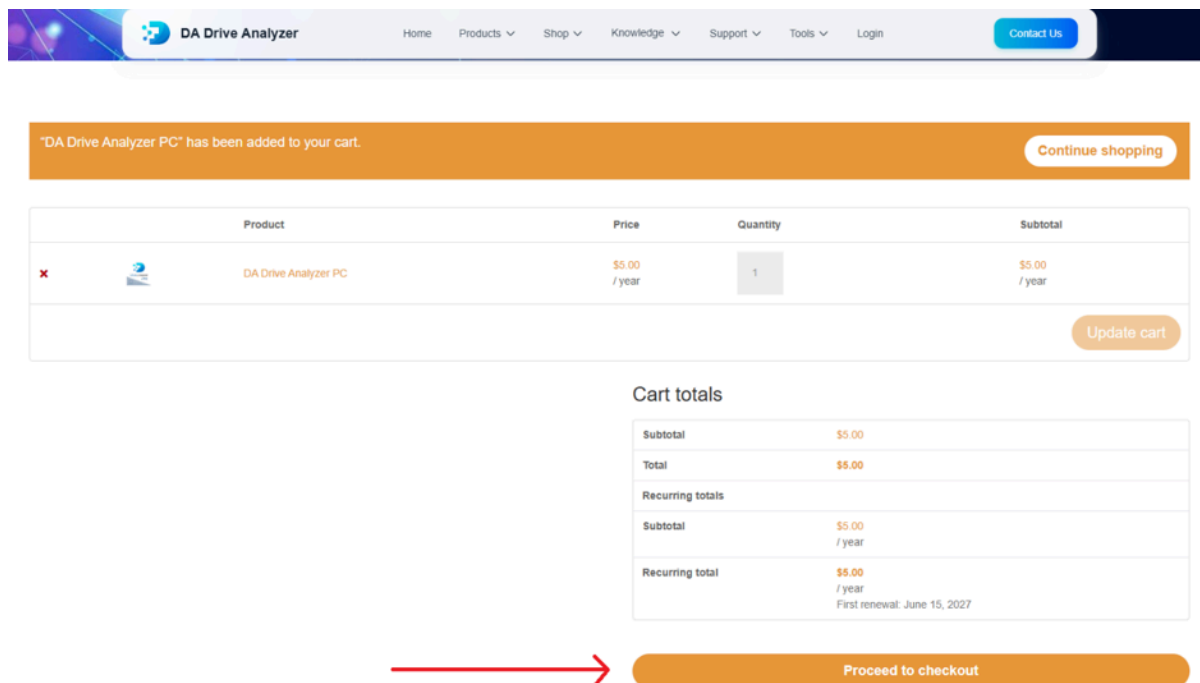

- e. You will be redirected to the DA Account Center login page, click on the “Click here to log in” to login or to create a new account.

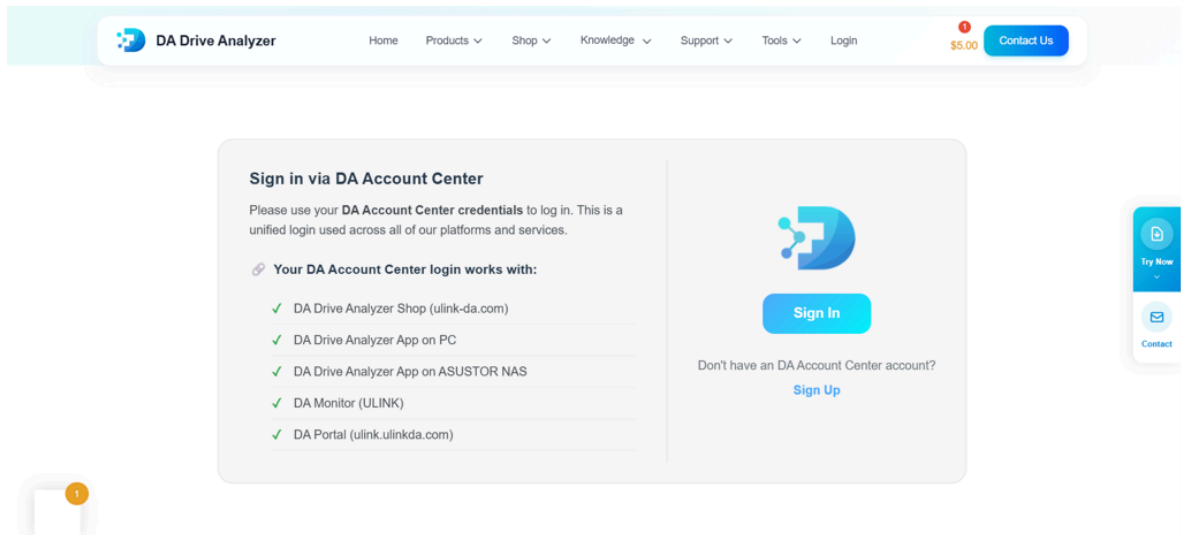

- f. Submit the log in credentials to login

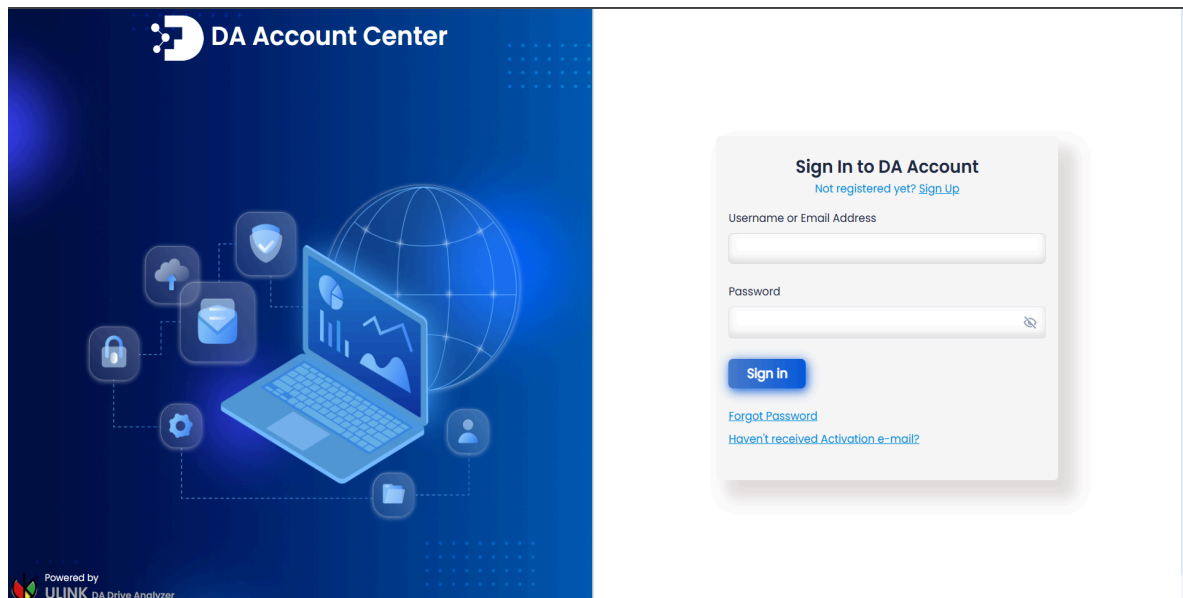

- g. Once you are logged in to the DA Account Center, you will be redirected to the checkout page where you can submit the required information and any applicable payment details to proceed with your order. Please check the checkbox for Terms and

conditions before proceeding with placing your order.

Order Details

Product	Subtotal
DA Drive Analyzer PC * 1	\$5.00 / year
Subtotal	\$5.00
Total	\$5.00
Recurring totals	
Subtotal	\$5.00 / year
Recurring total	\$5.00 / year First renewal: June 15, 2027

User Information

Billing details

First name (optional)
Saurabh

Company name (optional)

Street address (optional)
House number and street name

Town / City (optional)

Postcode / ZIP (optional)

Email address *
dsanjay@ugift.com

Last name (optional)
Pawar

Country / Region (optional)
United States (US)

Apartment, suite, unit, etc. (optional)

State / County (optional)
California

Phone (optional)

Card Details

Credit / Debit Card

Pay with your credit card via Stripe.

☐ Visa ending in 8002 (expires 01/20)

☒ Use a new payment method

Card number
1234 1234 1234 1234

Expiration date
MM / YY

Security code
CVC

By providing your card information, you allow ULINK to charge your card for future payments in accordance with their terms.

Your personal data will be used to process your order, support your experience throughout this website, and for other purposes described in our privacy policy.

☐ I have read and agree to the website [terms and conditions](#) *

Place Order

- h. Once an order is placed, you will be directed to the order page where you can find your order details along with a downloadable app installation (.pkg) file and license key/s. Upon placement of order, you will also receive two emails - an order received email and an order confirmation email. The order confirmation email contains your order details along with a downloadable app installation file and license key/s. You can download the app installation file from the order page or by clicking on the installation file link in the email.

Downloading the app installation file (.pkg) from the order page :

View the status of your subscription in [your account](#).

Downloads

Product	Download
DA Drive Analyzer PC Trial	DA Drive Analyzer Windows
DA Drive Analyzer PC Trial	DA Drive Analyzer Mac

Order details

Product	Total
DA Drive Analyzer PC Trial × 1 licenseKey: B1JK3-Z0600-GH761-A8ACT-5E1NE-TPVW6TWUC	\$0.00
Subtotal:	\$0.00
Total:	\$0.00

Actions: [Cancel & Refund](#)

[Print invoice](#)

[Download invoice](#)

Downloading the app installation file from the order confirmation email :

Compose

Inbox

Starred

Snoozed

Sent

Drafts

Categories

More

ULINK DA Desktop <notification@da.ulinktech.com> to me

ULINK DA Drive Analyzer

Good things are heading your way!

Hi Saurabh,

We have finished processing your order.

Here's a reminder of what you've ordered:

Downloads

Product	Expires	Download
DA Drive Analyzer PC Trial	Never	DA Drive Analyzer Windows
DA Drive Analyzer PC Trial	Never	DA Drive Analyzer Mac

Order summary

Order #253362 (June 19, 2026)



Product	Quantity	Price
DA Drive Analyzer PC Trial licenseKey: B1JK3-Z0600-GH761-A8ACT-5E1NE-TPVW6TWUC	×1	\$0.00
Subtotal:		\$0.00
Total:		\$0.00


License Key →

Click to download pkg


2. DA Drive Analyzer Installation

- Upon downloading the app installation file (.pkg), double-click on the saved file to start the installation process. The installation process will start. An installation window will appear with an End User License Agreement. Click on “Agree” to continue with the installation .

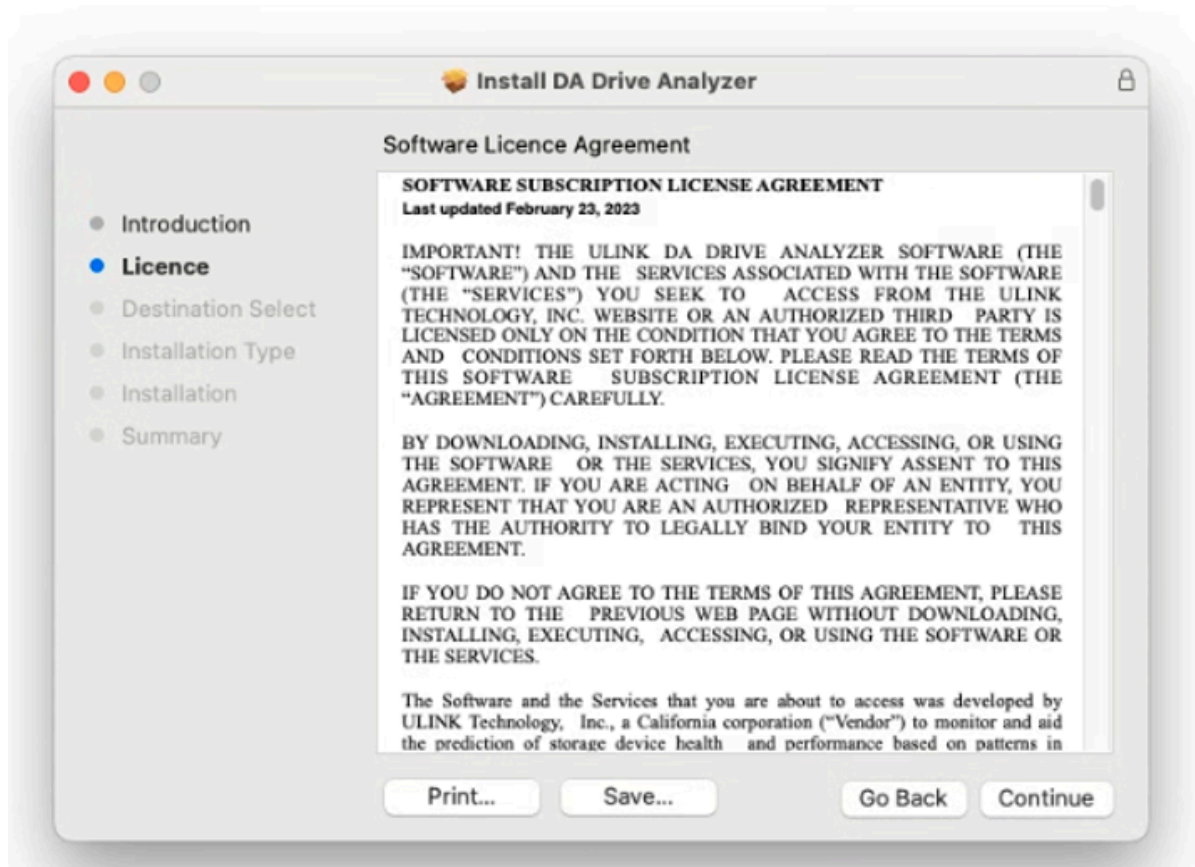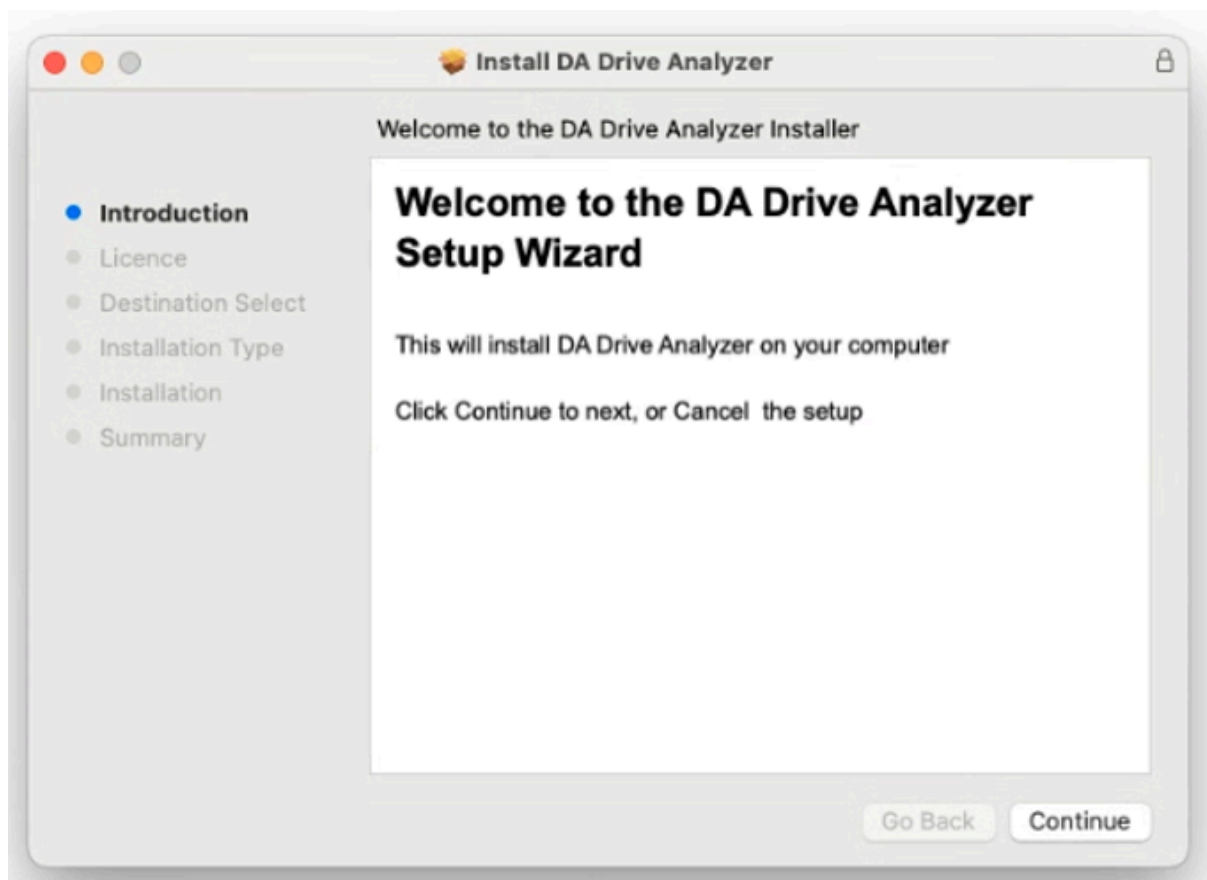


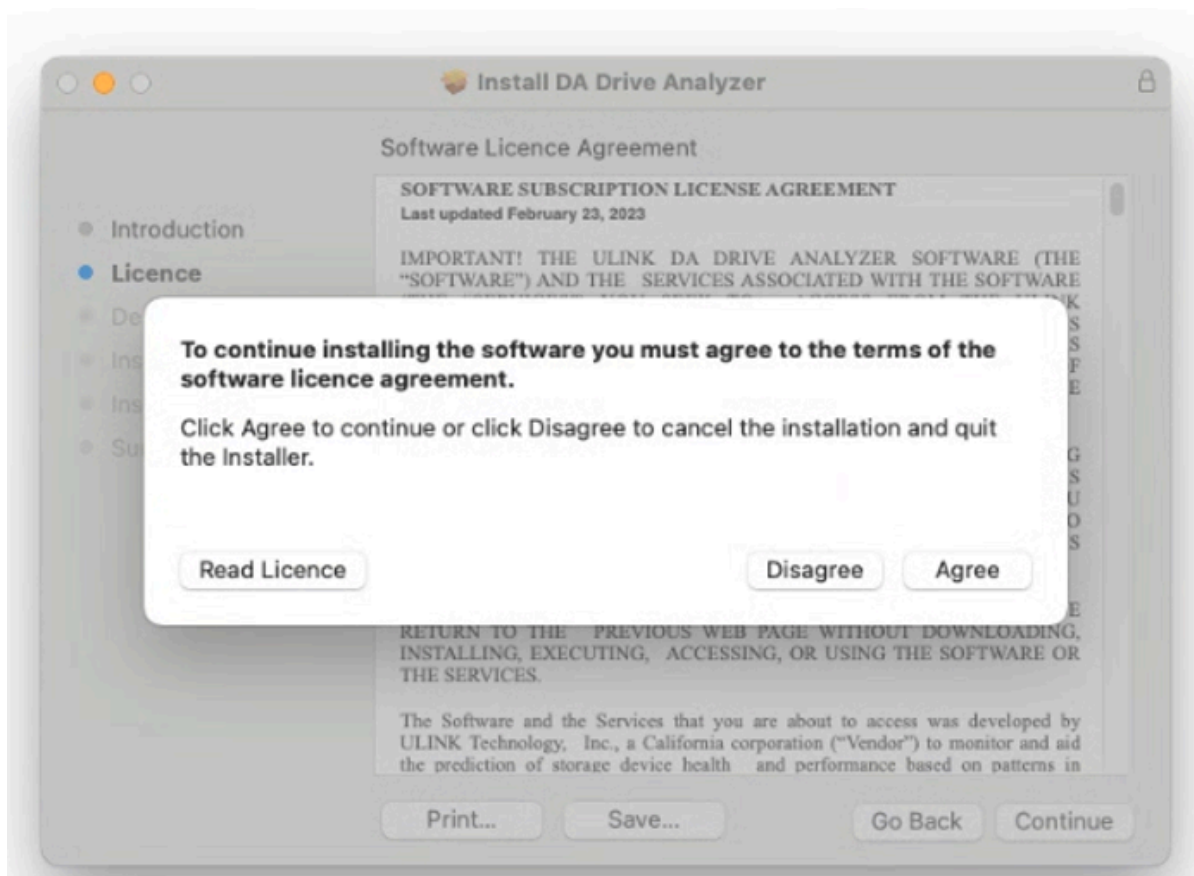


b. Select the Destination for installing the application..

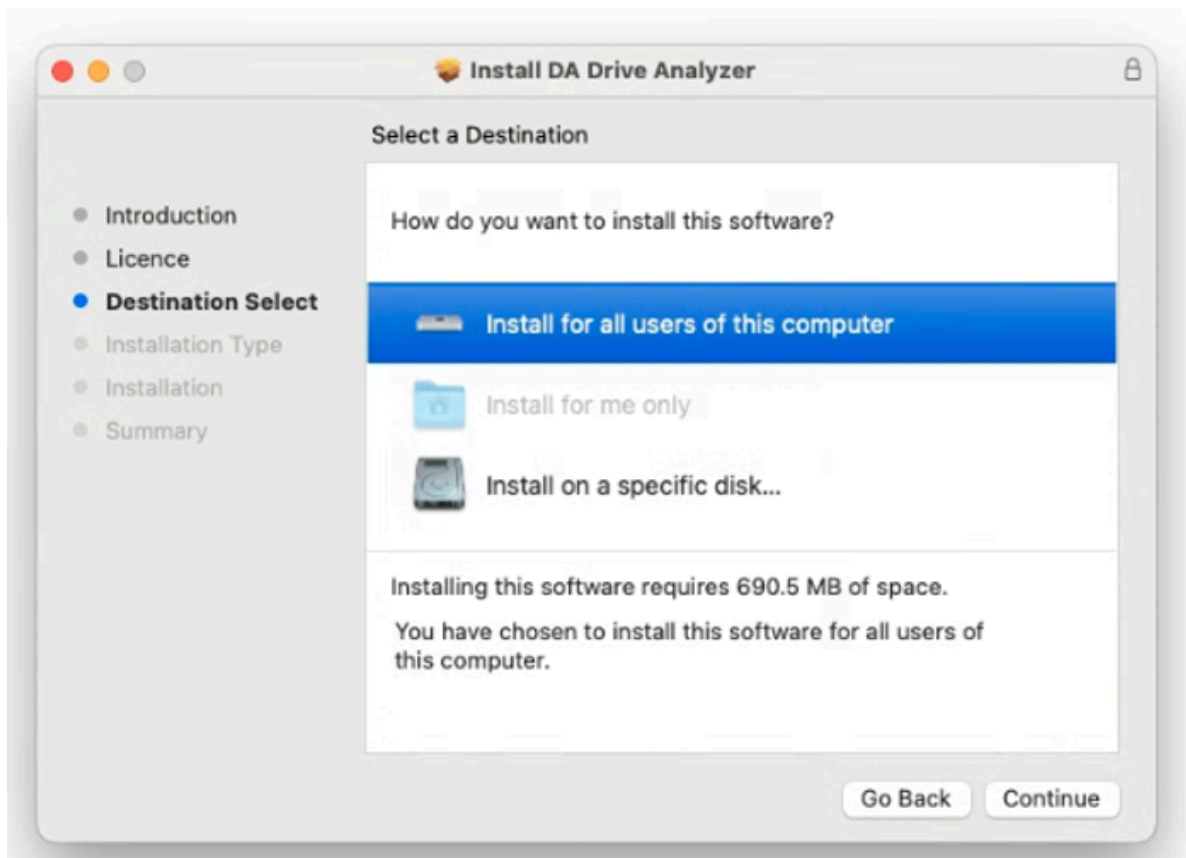


- c. Select Installation Type to install the application.

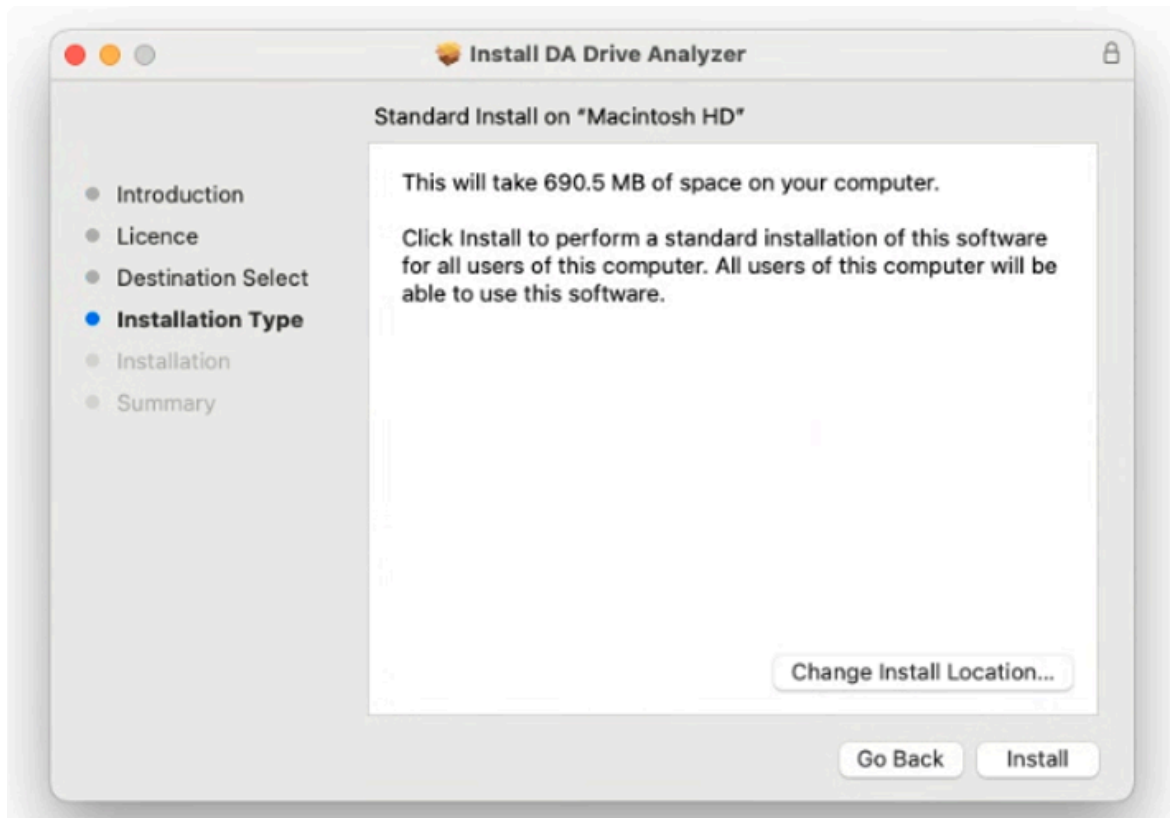

- d. Enter the user password to allow installing the application.

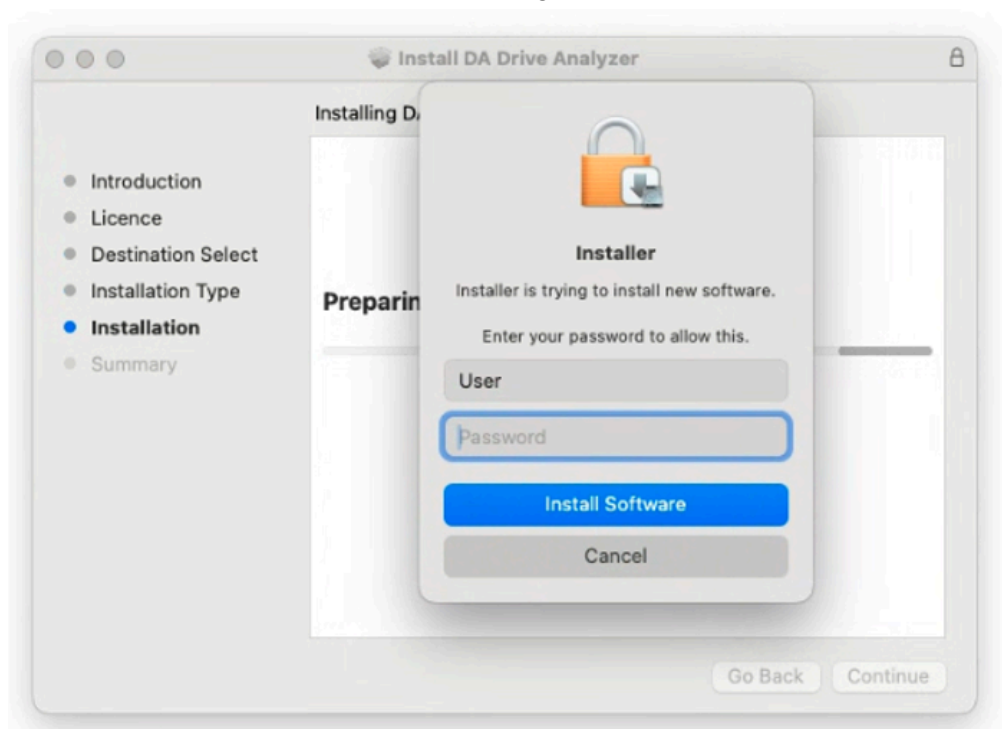


- e. Click on continue to complete the installation.

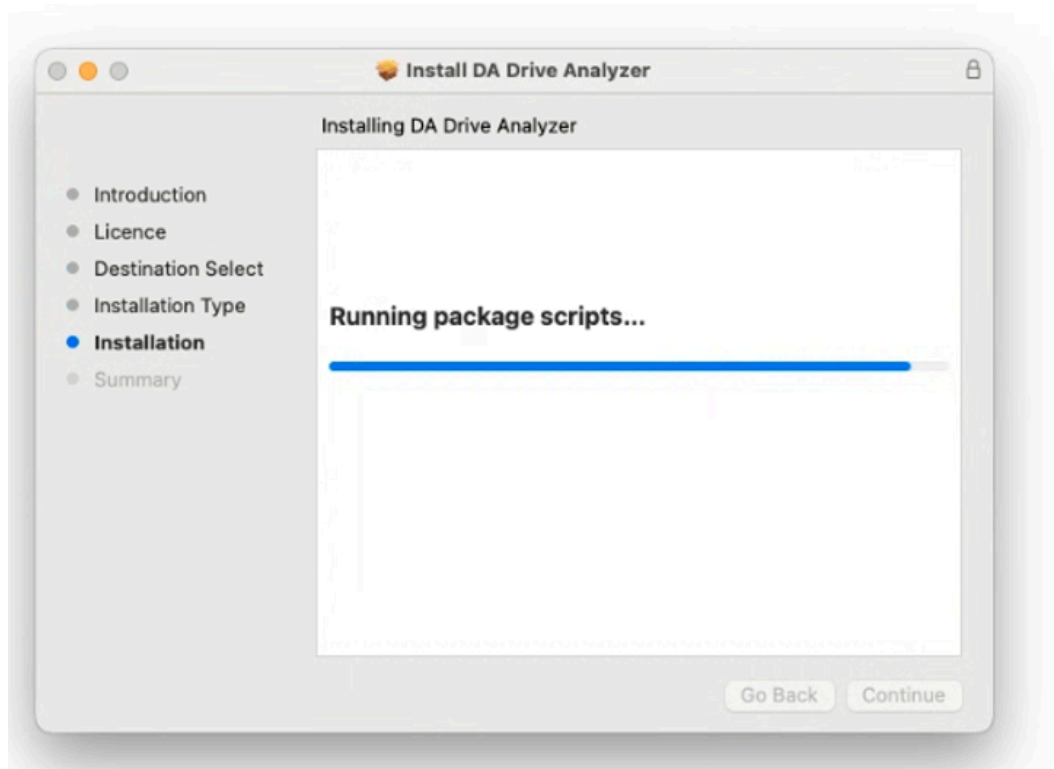


3. Application Mode Selection and License Activation

- a. Once the DA Drive Analyzer MAC's app is launched, you will see a screen for Application Mode Selection, where the two modes of the application are presented.
 - i. Cloud: Installing DA Drive Analyzer app in Cloud Mode allows the application to upload drive health data to DA Drive Analyzer's cloud servers, giving you access to the full set of features -including threshold-based alerts, detailed health metric displays, and more. An internet connection is required. If no internet connection is available, the application will default to Standalone Mode.
 - ii. Standalone: Installing DA Drive Analyzer in Standalone Mode keeps your drive health data strictly on your local device. AI-based drive health predictions will be generated, but other features will not be available. No internet connection is required.

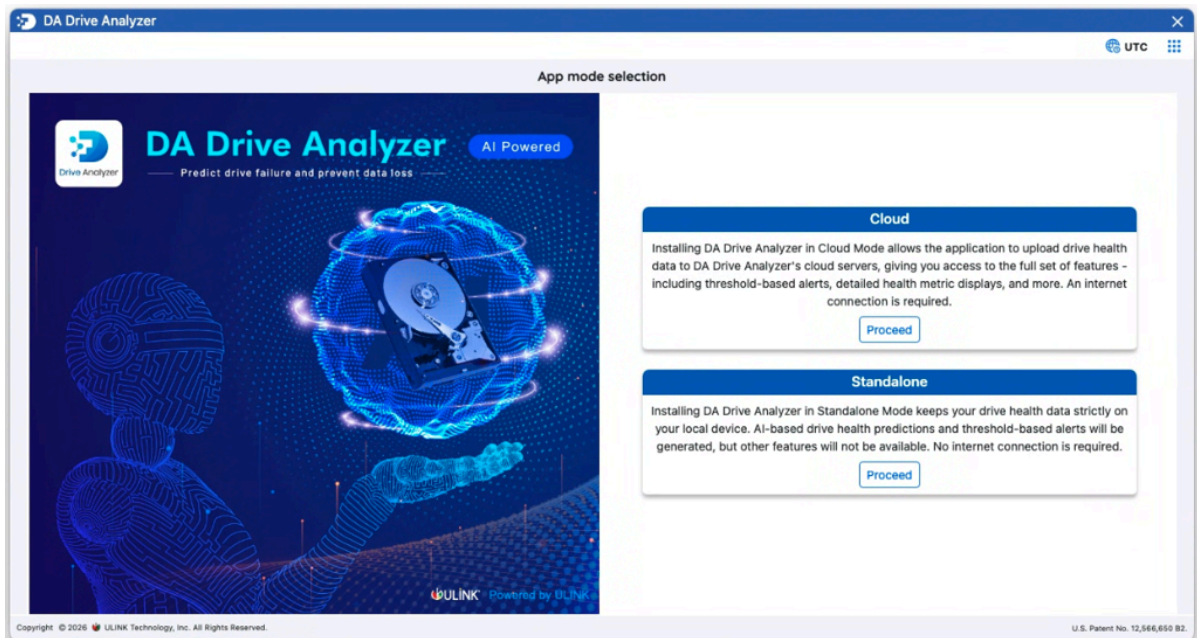


4. **Option 1: Cloud Mode Selection and License Activation**

- a. Click on “Proceed” button on the card for Cloud mode, you will be redirected to the ULINK Account Login page.

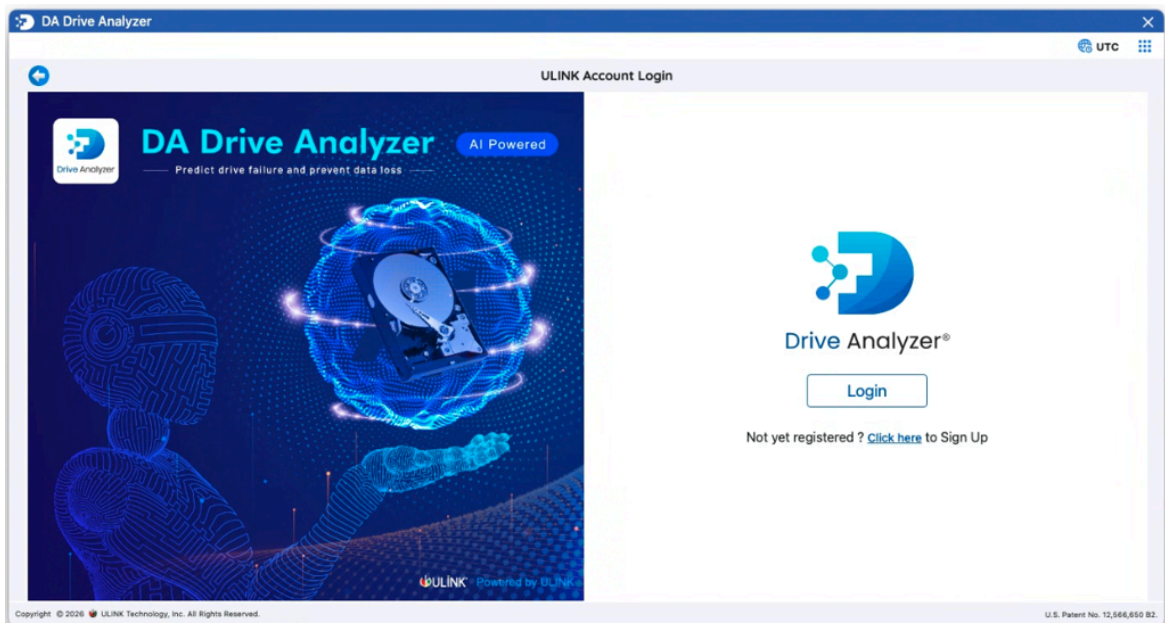

- b. Click on “Login” if you already have an ULINK account otherwise click on “Sign Up” and follow the process to create a new account. Once you click on the “Login” button, you will be redirected to the sign-in page. Enter the required information and click on “Sign In”

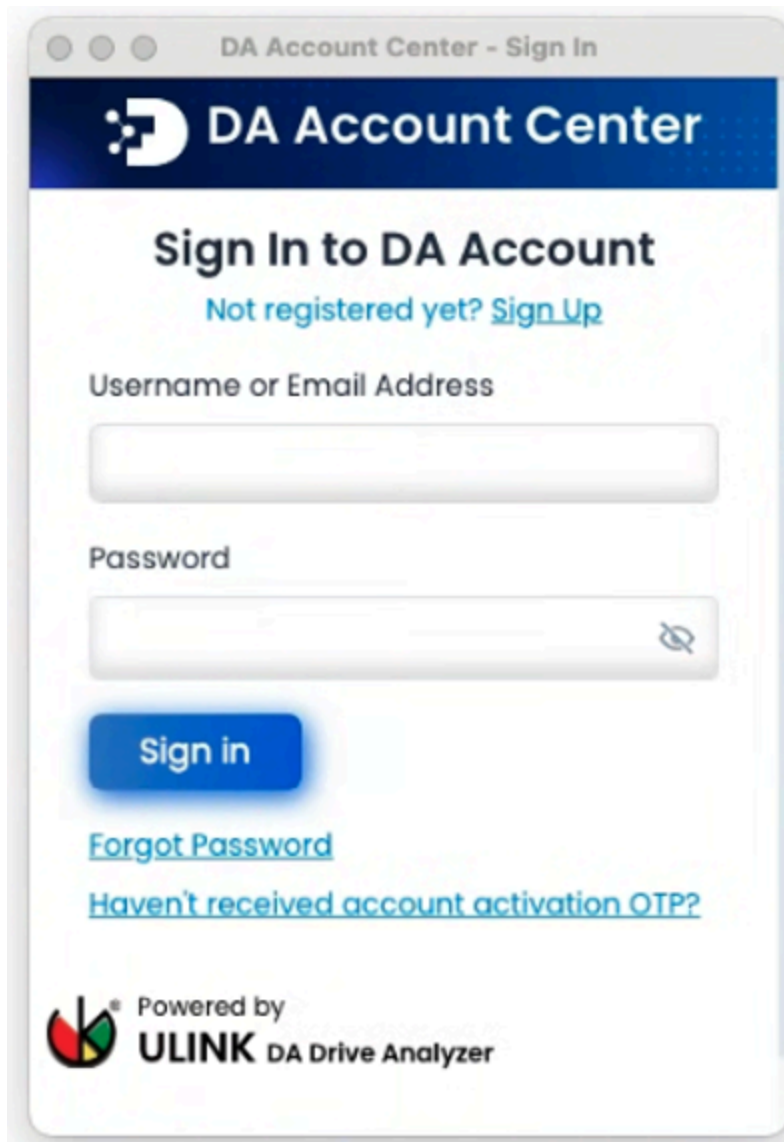

DA Account Center - Sign In

DA Account Center

Sign In to DA Account

Not registered yet? [Sign Up](#)

Username or Email Address

Password


[Sign in](#)

[Forgot Password](#)

[Haven't received account activation OTP?](#)

 Powered by
ULINK DA Drive Analyzer


- c. You will be directed to the “Activate License Key” page, fill in the required information and click on “Activate License”. If you do not have a license key, please proceed to [“https://ulink-da.com/shop/”](https://ulink-da.com/shop/) to purchase or obtain a license.

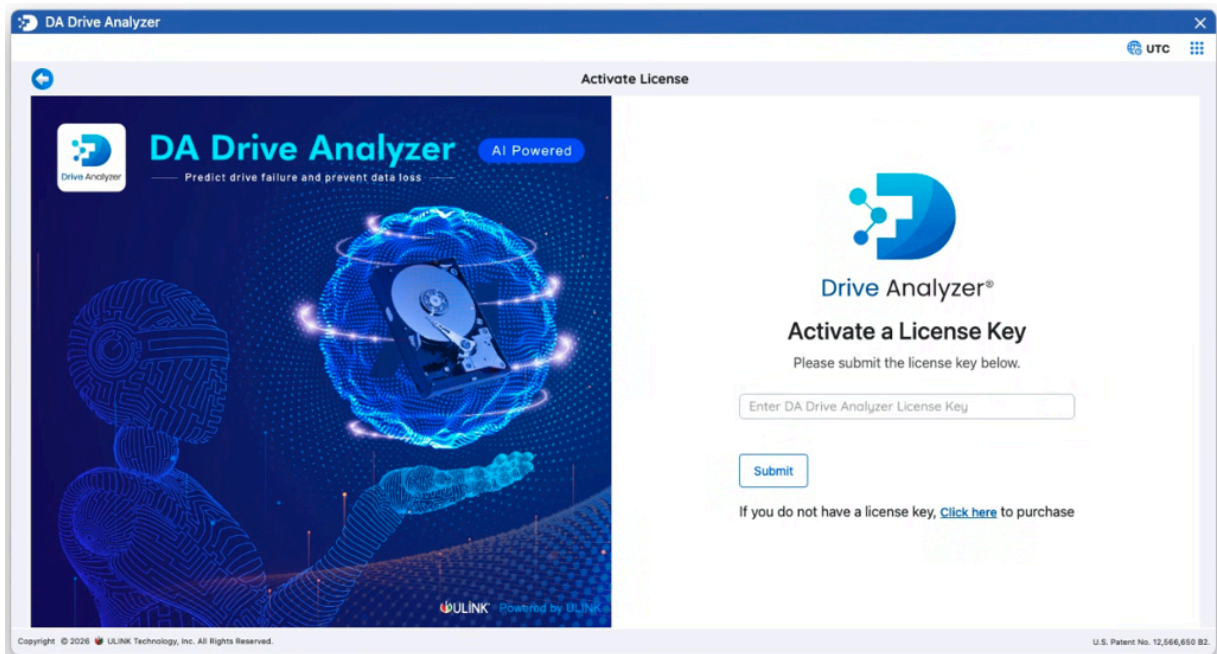


- d. Upon successful activation, your DA Drive Analyzer Cloud Mode is set. Your drive health predictions generated via an online algorithm, other alerts, and drive health metrics will be available within 24-48 hours after your drive health data has been uploaded and processed. You can access these additional features via DA Portal or DA Monitor. For these features to work smoothly, please ensure that your internet connection is on, and your computer is not in sleep mode.

5. **Option 2: Standalone Mode Selection and License Activation**

- a. Click on the “Proceed” button on the card for Standalone mode.

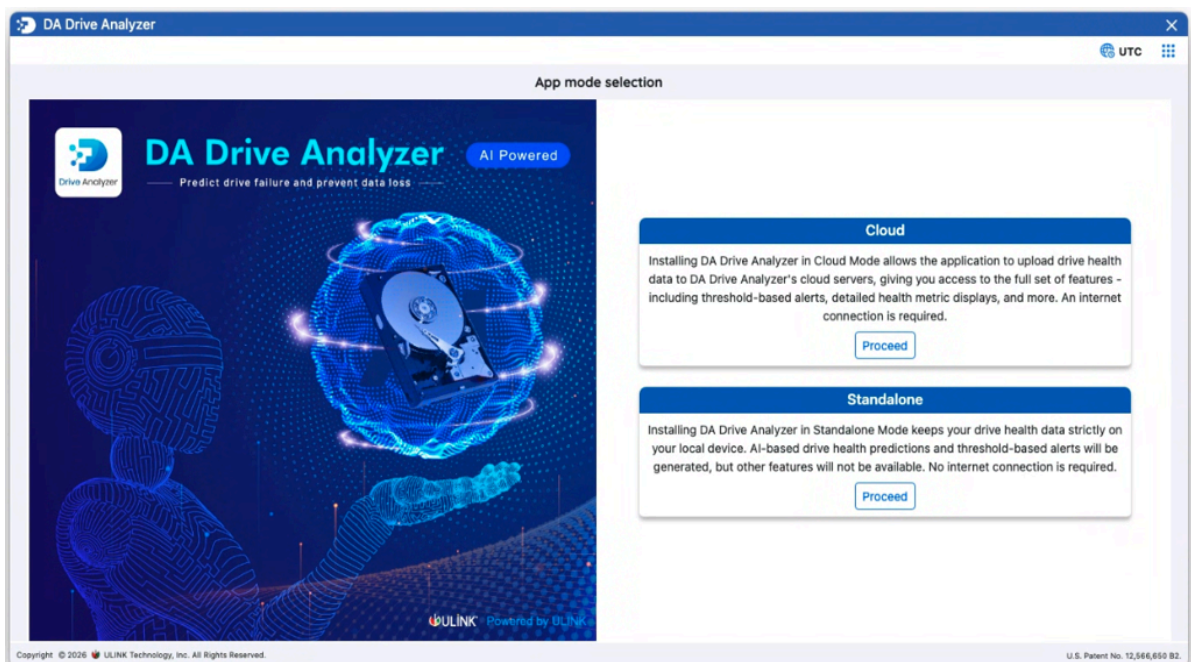


- b. You will be prompted to select your preferred method of activation. Choose one of the following options:
- Online Mode: In Online Mode, the application will communicate directly with the server to activate your license. This requires a stable internet connection.
 - In Offline Mode, you will need to manually activate your license. During the activation process, you will receive a license XML file, which must be uploaded for activation.

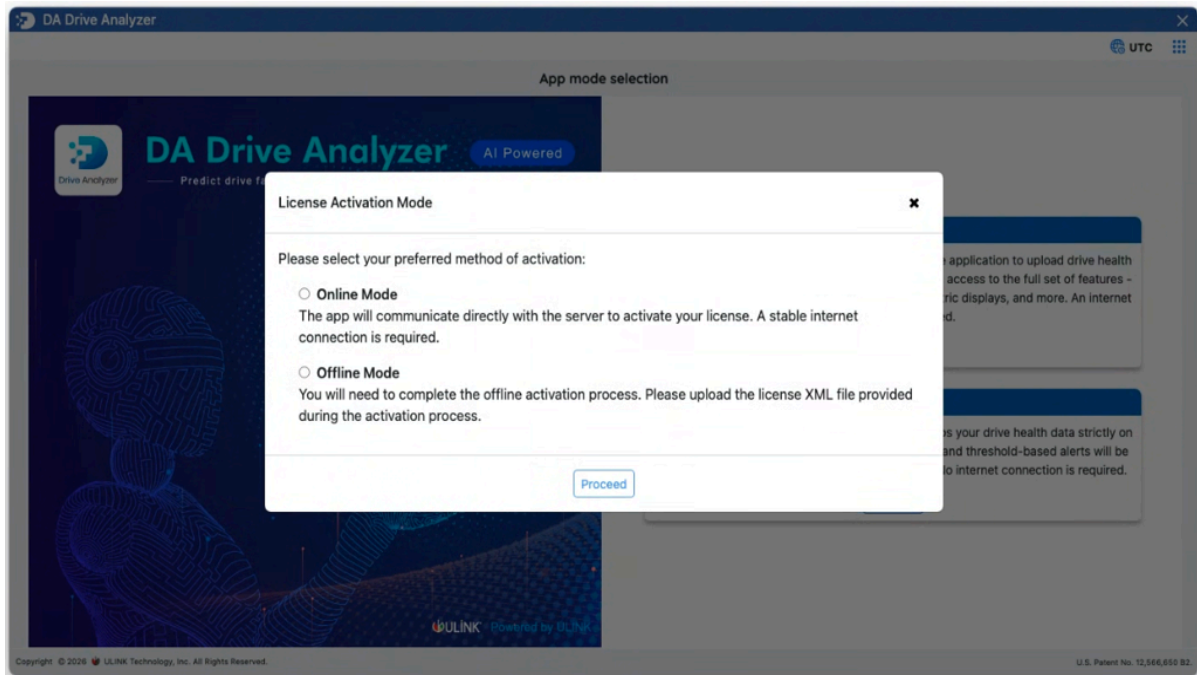


c. **License Activation Using Online Mode**

- Select Online Mode and click 'Proceed', you will be redirected to the ULINK Account Login page.

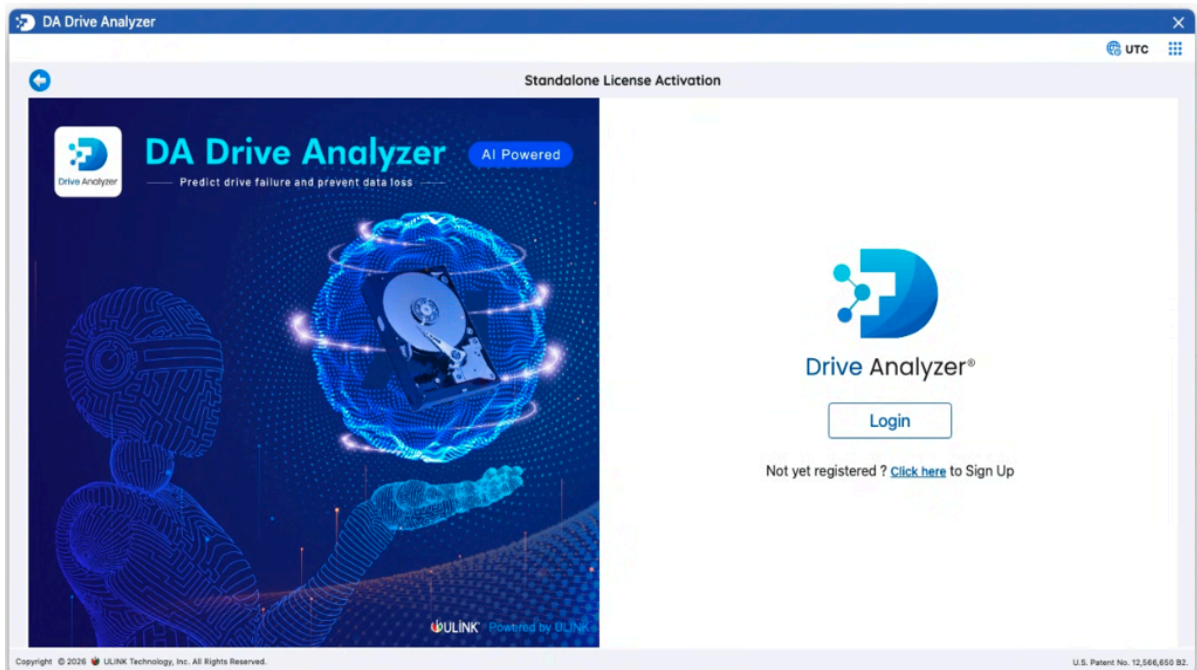


- ii. Click on “Login” if you already have an ULINK account otherwise click on “Sign Up” and follow the process to create a new account. Once you click on the “Login” button, you will be redirected to the sign-in page. Enter the required information and click on “Sign In”

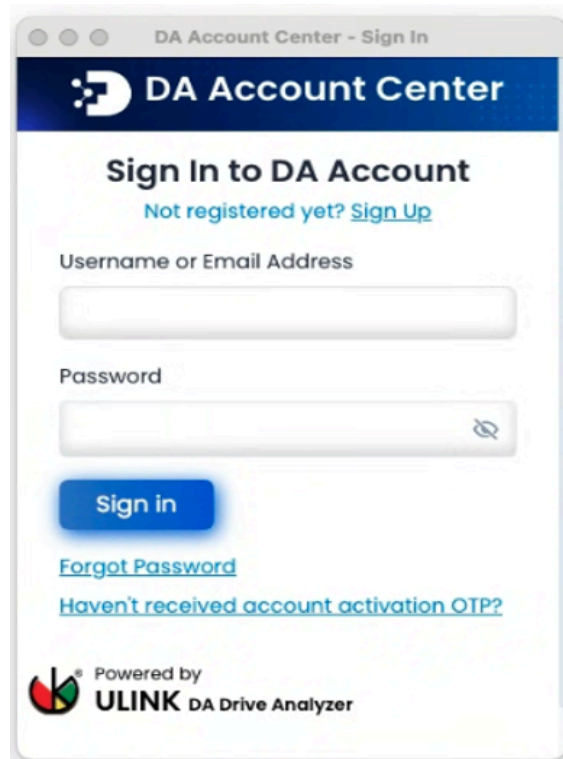

The screenshot shows a web browser window titled "DA Account Center - Sign In". The page has a blue header with the "DA Account Center" logo. Below the header, the main heading is "Sign In to DA Account". A link "Not registered yet? Sign Up" is displayed in blue. There are two input fields: "Username or Email Address" and "Password". Below the password field is a "Sign in" button. Two links are provided: "Forgot Password" and "Haven't received account activation OTP?". At the bottom, it says "Powered by ULINK DA Drive Analyzer" with the ULINK logo.

- iii. You will be directed to the “Activate License Key” page, fill in the required information and click on “Activate License”. If you do not have a license key, please proceed to “<https://ulink-da.com/shop-pc/>” to purchase or obtain a license.

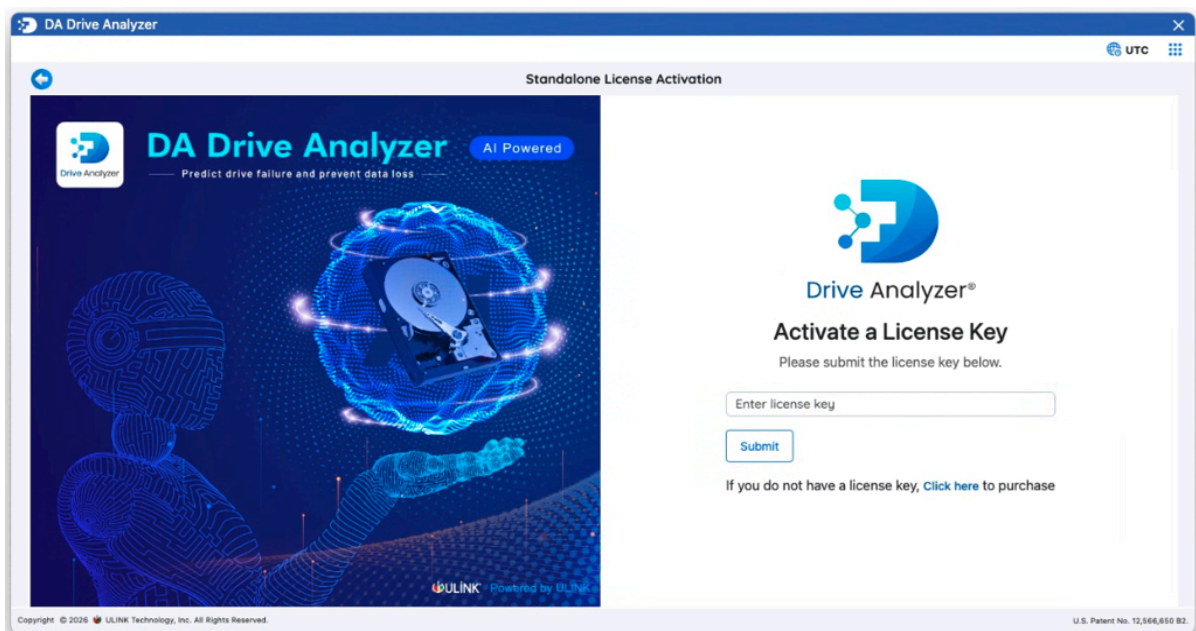


The screenshot shows a web browser window titled "DA Drive Analyzer". The page is for "Standalone License Activation". On the left, there is a large graphic with the text "DA Drive Analyzer" and "AI Powered". The main heading is "Activate a License Key". Below this, it says "Please submit the license key below." There is an input field labeled "Enter license key" and a "Submit" button. A link "Click here to purchase" is provided for users who do not have a license key. The footer contains copyright information: "Copyright © 2025 ULINK Technology, Inc. All Rights Reserved." and a patent number: "U.S. Patent No. 12,566,650 B2."

- iv. Upon successful activation, your DA Drive Analyzer Cloud Mode is set. Your drive health predictions generated via an online algorithm, other alerts, and drive health metrics will be available within 24-48 hours after your drive health data has been uploaded and processed. You can access these additional features via DA Portal or DA Monitor. For these features to work smoothly, please ensure that your internet connection is on, and your computer is not in sleep mode.

d. **License Activation Using Offline Mode**

- i. You will be redirected to an “Offline License Activation” page. Follow the steps mentioned on the page to activate the license.

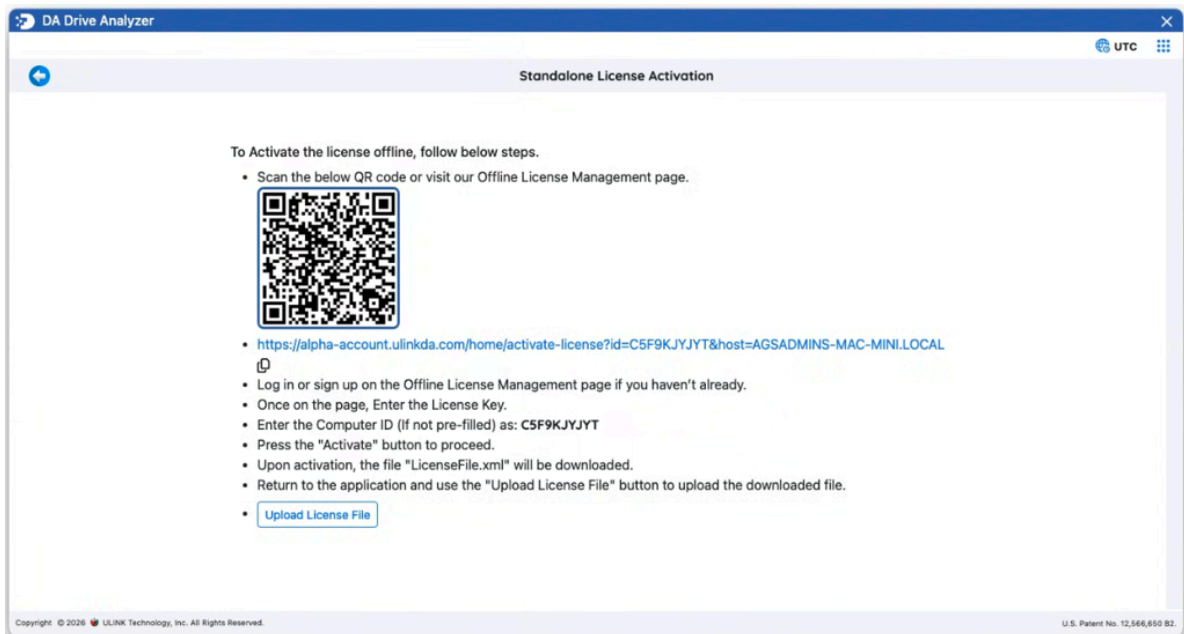

- e. Complete the license activation process by uploading the license .xml file to DA Drive Analyzer application. Your DA Drive Analyzer Standalone application should now be set and running.